

Hik-Connect Mobile Client Datasheet V4.11.0


Software Information

Name: Hik-Connect Mobile Client Software

Version: V4.11.0

System Requirement: Android 4.4 or later; iOS 10.0 or later



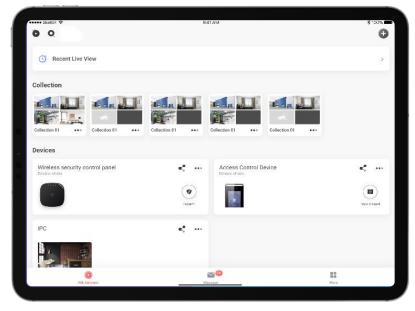

Introduction

Hik-Connect App is designed for managing Hikvision products, including DVRs, NVRs, cameras, video intercom devices, and security control panels. With the App, you can view real-time video or playback of your cameras via Wi-Fi or cellular network. When device alarms are triggered, you can get instant notifications in the App.

The App also supports functionality related with Hik-ProConnect, which is a platform for Installers in the security industry to manage customers' devices. In the App, you can grant permissions to an Installer to allow the Installer to provide configuration and maintenance services for you.

Key Features

- Account management
- Adding devices via scanning QR code
- Adding devices via IP/Domain
- Adding devices via Hik-Connect Domain
- Window divisions for Live View: 1-division, 4-division, 9-division, 12-division, and 16-division
- Changing video quality
- Adding devices to Favorites
- Two-way audio intercom
- Videos and pictures encryption
- PTZ control
- 8X digital zoom
- Simultaneous playback of up to 4 cameras

- Picture and video management
- Instant alarm notifications with pictures and videos
- Updating device firmware remotely
- Answering calls from doorbells/video intercom devices
- Arming security control panel remotely
- Sharing devices to others
- Login by fingerprint/facial authentication
- Hik-ProConnect cloud services
- Installer authorization management
- Device permission management
- ARC service
- Transferring devices to another account
- Device password reset

Functional Parameters

	>	Register a new account via email address or mobile phone
		number.
	>	Account login and logout
	>	Account information settings
	>	Change account password.
Account Management	>	Retrieve password.
Account Management	>	Visitor mode
	>	Login by fingerprint/facial authentication
	>	Edit alias.
	>	Edit linked mobile phone number or email address.
	>	Generate account QR code.
	A	Delete account.
	\wedge	1/4/9/12/16 window division
	>	Audio control
	>	Max. 8X digital zoom
	>	Capture and recording
	>	Full-screen mode
Live View	>	Two-way audio
	>	Change live view quality.
	>	Enable fisheye mode.
	>	Hardware decoding (Only supported by devices added via
		IP/Domain.)
	>	Noise reduction
	>	Control PTZ.
PTZ	>	Zoom in and out.
PIZ	>	Adjust PTZ speed.
	>	Control focus and iris.

	Set and call preset.	
	Auto Scan (Device support required.)	
	Auto-Tracking (Device support required.)	
	Search videos by time for playback.	
	4-window division mode for playback simultaneously	
	Control audio.	
Playback	Capture and recording	
	 Drag timeline to set playback start time. 	
	Adjust playback speed.	
	Adjust playback speed.Hardware decoding	
	Event playback	
	 Download video footage from cloud. 	
	Play video footage from cloud.	
	Noise reduction	
	Add and delete device.	
	Supports adding the devices which support Hik-Connect	
	service (hereafter simplified as "Hik-Connect device" via Hik-	
	Connect domain or scanning QR code.	
	Supports adding devices via IP/Domain.	
	 Supports adding detected online devices which are in the 	
	same local area network with the phone or tablet.	
	Edit device name and channel name.	
	Display storage status and device version (for Hik-Connect Devices).	
	,	
	, , , , , , , , , , , , , , , , , , , ,	
	,	
Device Management	Videos and pictures encryption (for Hik-Connect Devices)Share channels to other accounts.	
Device Management		
	Set partition and zones (for security control panels).	
	Unbind devices from other accounts with devices' password.	
	Reset device password.	
	Configure devices remotely.	
	 Change device verification code. Set DDNS (Only supported by devices added via Hik-Connect 	
	Domain or Scanning QR Code).	
	Add devices to Favorites.	
	Draw motion detection area for specific network cameras.	
	Configure audio and strobe light alarm, light settings, PIR	
	detection for Floodlight camera.	
Hills Done Communication	Record and set custom audio alarm for devices.	
Hik-ProConnect Cloud	Manage device authorization and Installer permission.	
Service	 View the details of the Sites that you own, including site 	

name, devices on the each site, and information of the Installer who is managing the devices of a Site. Authorize Installer with more devices by adding them to a Site. Edit permissions granted to the Installer. Cancel all authorizations of devices in a Site from the Switch between multiple Installers. Transfer all device in a Site to another account. Enable/disable Alarm Receiving Center (ARC) service for a Check and respond to cloud service notifications Receive device handover applications from Installer. Receive device permission applications from Installer. Receive notifications about Installer cancels device authorization. Receive notifications about the device permissions released by Installer. Receive device transfer applications from other users. Receive device offline notifications. Receive device password reset application. View history linkage, which refers to the process in which an event detected by a device triggers actions of other. View logs about Installer's operations on devices. Check and share previously deauthorized devices in a Site. View external linked videos, which refers to the video recorded by the linked device of the alarm-source. Value-added services (Only available in some countries or regions): People Counting - Monitor the number of persons who have entered a specific area in real time. Set the maximum persons allowed to stay in the area. Temperature Screening - Monitor the skin-surface temperature of the persons detected in the live view of temperature screening devices. Set the threshold temperature for triggering abnormal temperature alarm. Arm and disarm remotely. Receive alarm (event) notifications. View alarm (event) information, related pictures, and related videos. **Alarm Notification** (Thermal binoculars) View alarm-related optical mode picture and thermographic mode picture. Supports two notification modes: "Receive Events and Push Notifications" and "Receive Events but Not Push Notifications".

Receive notifications when others call.			
Video Intercom Control two-way audio. Play back video footage from the camera linked to the door station. Video related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Security Control Panel Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Powent armined of a reas to the NVR. Acusense Series NVR Acusense Series NVR Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Receive notifications when others call.
Video Intercom Video Intercom Video Intercom Video Intercom View live video streamed from the camera linked to the door station. Control two-way audio. Play back video footage from the camera linked to the door station. View related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Acusense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Remotely accept or decline calls (from doorbells).
Video Intercom Video Intercom Video Intercom View live video streamed from the camera linked to the door station. View live video streamed from the camera linked to the door station. Play back video footage from the camera linked to the door station. View related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Remotely open/close door.
Video Intercom View live video streamed from the camera linked to the door station. Control two-way audio. Play back video footage from the camera linked to the door station. View related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network switches in the device list after Installer hands them over to you. Network Switch Acusense Series NVR (Australian market only) Adu pt 0 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	View call history.
station. Control two-way audio. Play back video footage from the camera linked to the door station. View related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Acusense Series NVR (Australian market only) Adu pt o 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Switch scenes (Stay, Away, Sleep, and Custom) for indoor stations.
> Control two-way audio. > Play back video footage from the camera linked to the door station. > View related events of the latest 7 days. > Configuration of the partitions (areas), detectors and sensors, etc. > Stay arm/Away arm/Disarm > Clear alarms. > Receive alarm notifications. > Bypass zones. > Forbid bypassing zones. > Set cross zone. > Manually activate panic alarm by tapping PA icon. > Find peripherals with Find Me. > Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Access Control Access Control DVR/NVR DVR/NVR DVR/NVR DVR/NVR Possible for instory events. Live view - Start live view of all linked cameras in bulk Start playback of single camera Event notification - Remote configuration - Quick disable/enable notification and alarm Set arming/disarming schedule Set custom audio alarm View network topology (Wi-Fi NVR only). Network Switch - Check device status including uptime, CPU/GPU usage, and port connection Event notification - Adu up to 4 areas to the NVR Arm/disarm area(s) Automatically arm/disarm a specific area.	Video Intercom	>	View live video streamed from the camera linked to the door
Play back video footage from the camera linked to the door station. View related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Phown network switches in the device list after Installer hands them over to you. Network Switch Acusense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			station.
station. View related events of the latest 7 days. Configuration of the partitions (areas), detectors and sensors, etc. Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Phow network switches in the device list after Installer hands them over to you. Network Switch Acusense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Control two-way audio.
View related events of the latest 7 days.		>	Play back video footage from the camera linked to the door
Security Control Panel Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification Acusense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			station.
Stay arm/Away arm/Disarm Clear alarms. Receive alarm notifications. Bypass zones. Security Control Panel Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	View related events of the latest 7 days.
Clear alarms. Receive alarm notifications. Bypass zones. Porbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Network Switch AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Configuration of the partitions (areas), detectors and sensors, etc.
Security Control Panel Receive alarm notifications. Bypass zones. Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Network Switch AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	,
Security Control Panel Security Control Panel			
Security Control Panel Forbid bypassing zones. Set cross zone. Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Network Switch AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			
> Set cross zone. > Manually activate panic alarm by tapping PA icon. > Find peripherals with Find Me. > Other functions such as faults check and wireless device supervision (only supported by specific security control panels) > Control doors remotely. > Configure access control devices. > Search for history events. Live view > Start live view of all linked cameras in bulk. > Start playback of single camera. > Event notification > Remote configuration > Quick disable/enable notification and alarm. > Set arming/disarming schedule. > Set custom audio alarm. > View network topology (Wi-Fi NVR only). > Show network switches in the device list after Installer hands them over to you. Physical Panick (PU/GPU usage, and port connection. > Event notification > Add up to 4 areas to the NVR. > Arm/disarm area(s). > Automatically arm/disarm a specific area.	Security Control Panel		
Manually activate panic alarm by tapping PA icon. Find peripherals with Find Me. Other functions such as faults check and wireless device supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Network Switch Network Switch AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			
> Find peripherals with Find Me. > Other functions such as faults check and wireless device supervision (only supported by specific security control panels) > Control doors remotely. > Configure access control devices. > Search for history events. Live view > Start live view of all linked cameras in bulk. > Start playback of single camera. > Event notification > Remote configuration > Quick disable/enable notification and alarm. > Set arming/disarming schedule. > Set custom audio alarm. > View network topology (Wi-Fi NVR only). Network Switch Network Switch Network Switch AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). > Automatically arm/disarm a specific area.			
DVR/NVR DVR/NVR DVR/NVR Network Switch Network Switch Access Centrol Access Control Access Control DVR/NVR DVR/NVR Access Control Access Control DVR/NVR Access Control Access Control Access Control DVR/NVR DVR/NVR Access Control DVR/NVR Access Control DVR/NVR Access Control Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			
Supervision (only supported by specific security control panels) Control doors remotely. Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Network Switch Network Switch Network Switch AcuSense Series NVR (Australian market only) Acutomatically arm/disarm a specific area.			
Access Control Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Network Switch AcuSense Series NVR (Australian market only) Acutomatically arm/disarm a specific area.		>	
Access Control Configure access control devices. Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) At dd up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			
Access Control Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Network Switch Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Control doors remotely.
Search for history events. Live view Start live view of all linked cameras in bulk. Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Network Switch Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Automatically arm/disarm a specific area.	Access Control	>	Configure access control devices.
DVR/NVR Start live view of all linked cameras in bulk.		>	Search for history events.
DVR/NVR Start playback of single camera. Event notification Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Live view
DVR/NVR Event notification		>	Start live view of all linked cameras in bulk.
DVR/NVR Remote configuration Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Acutomatically arm/disarm a specific area.			Start playback of single camera.
DVR/NVR P Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Acutomatically arm/disarm a specific area.			Event notification
 Quick disable/enable notification and alarm. Set arming/disarming schedule. Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area. 	DVR/NVR	>	Remote configuration
 Set custom audio alarm. View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area. 	J Trigitalia		Quick disable/enable notification and alarm.
 View network topology (Wi-Fi NVR only). Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area. 		>	Set arming/disarming schedule.
 Show network switches in the device list after Installer hands them over to you. Check device status including uptime, CPU/GPU usage, and port connection. Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area. 		>	Set custom audio alarm.
Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	View network topology (Wi-Fi NVR only).
Network Switch Check device status including uptime, CPU/GPU usage, and port connection. Event notification AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Show network switches in the device list after Installer hands
connection. Event notification AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			them over to you.
AcuSense Series NVR (Australian market only) Event notification Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.	Network Switch	>	Check device status including uptime, CPU/GPU usage, and port
AcuSense Series NVR (Australian market only) Add up to 4 areas to the NVR. Arm/disarm area(s). Automatically arm/disarm a specific area.			connection.
AcuSense Series NVR (Australian market only) Arm/disarm area(s). Automatically arm/disarm a specific area.		>	Event notification
(Australian market only) Arm/disarm area(s). Automatically arm/disarm a specific area.	A 6 6 1 111 1	>	Add up to 4 areas to the NVR.
only) Automatically arm/disarm a specific area.		>	Arm/disarm area(s).
		>	Automatically arm/disarm a specific area.
		>	Clear alarm(s).

	T
	Link AcuSense cameras to the NVR.
	View Live video streamed from the cameras linked to the NVR.
	> Set the cameras linked to the NVR.
	> Wake up device.
	Live view and playback
Solar Camera	View status including battery level and network signal strength.
	Switch power consumption mode.
	> Event notification
Pictures and Videos Management	Manage local pictures and videos.
	View pictures and play videos.
	Download pictures and video.
	> Share pictures and videos to others.
	> Enable push notification.
	Enable/disable saving device parameters.
	Enable/disable hard-decoding.
	> Enable auto-receiving alarm (event) information when the device
	is powered on.
	View traffic statistics.
System Settings	> Resume latest live view.
	Display floating live view on the device list.
	Display channel-zero.
	Reset password for DVR and NVR.
	> Set Wi-Fi.
	New versions online detection
	Help and feedback
	Simplified Chinese, English, Russian, Estonian, Bulgarian,
Language	Hungarian, Greek, German, Italian, Czech, Slovak, French, Polish,
	Dutch, Portuguese, Spanish, Romanian, Danish, Swedish,
	Norwegian, Finnish, Croatian, Slovenian, Serb, Turkish, Korean,
	Traditional Chinese, Thai, Vietnamese, Japanese, Hebraism,
	Latvian, Lithuanian, Brazilian Portuguese, Arabic, Farsi,
	Indonesian, Uzbek, Kazak, Ukrainian

Technical Parameters

Item	Parameters
Max. Connected Devices (Hik-Connect Domain)	1024
Max. Channels Can Be Selected for Live View or	256
Playback	
Max. Shared Accounts (By One Channel)	64
Max. Streaming Number (One channel/ Live	20
View)	

Item	Parameters
Max. Cameras for Live View Simultaneously	16
Max. Cameras for Playback Simultaneously	4 (*supported model only)
Max. Favorites Folders	32
Max. Users for Receiving Shared Devices	100
Video Encoding	H.264,MPEG4,MJPEG,
	H.264+,H.265,H.265+
Audio Encoding	G711_A,G711_U,AAC
Compatible Devices	DVRs, NVRs, cameras, video intercom
	devices and security control panels with
	Hik-Connect function.